TREKSTOR®
Enjoy now.

i.Beat sense 1.8"

EN

TrekStor i.Beat sense 1,8”
Manual

Contents

1. Shapes and Keys 3
2. Basic operation 3
2.1 Power on 3
2.2 Power off 3
2.3 Reset 3
2.4 Connecting the computer and data file transmission 3
2.5 Turn the display off 3
2.6 Battery 3
2.7 Charging 3
3. Display screen 4
3.1 Main menu 4
3.2 Radio menu 4
3.3 Music 4
3.4 Record 4
3.5 Photo 5
3.6 Text 5
4. Operation 5
4.1 Main menu 5
4.2 Music 6
4.3 Photo 6
4.4 Radio 7
4.5 Text 7
4.6 Record 8
4.7 Explorer 8
4.8 Settings 8
4.9 Video 8
5. Common troubleshooting 9
5.1 The device will not power on 9
5.2 No sound 9
5.3 Noise in playing 9
5.4 Unable to download files 9
5.5 A video file cannot be played 9
Battery disposal 11
Support information 12

1. Shapes and Keys

1) On/Off
2) Back
3) mini USB Port
4) Reset-button
5) Headphone jack

2. Basic operation

2.1 Power on

In the power off state, press the ⏻ button for 3 seconds until the unit will display the TrekStor logo and the main menu interface.

2.2 Power off

Press the ⏻ button again for a few seconds, to turn off the device.

2.3 Reset

If the screen is frozen or breaking down in the process of your player's operation, you can turn off and restart the player by pressing "**Reset**" by using an a sharp object such as a pen or a paper clip.

2.4 Connecting the computer and data file transmission

Start the computer and connect your i.Beat sense 1.8" by using an USB cable. Now you can start the data transmission or charging.

2.5 Turn the display off

In the Settings menu under "backlight", you can set the time after which the display turns off automatically.

2.6 Battery

The duration available of the battery power depends on the volume and the types of played files. The duration of the battery can be regulated by different power settings e.g. the Auto off mode.

Note: The maximum operating time of the MP3 player can be reached only after approximately 10 battery charging cycles have been completed.

2.7 Charging

The i.Beat sense 1.8" unit can be recharged by USB port, you can also use the designated normal charger which was provided to you with the unit to charge it. Connect the unit with the charger to charge it. If you connect the player with

the computer, when the battery icon displays as full, it indicates that the charging is full. Otherwise, when the battery icon displays as charging, it display is charging.

3. Display screen

3.1 Main menu

3.2 Radio menu

3.3 Music

3.4 Record

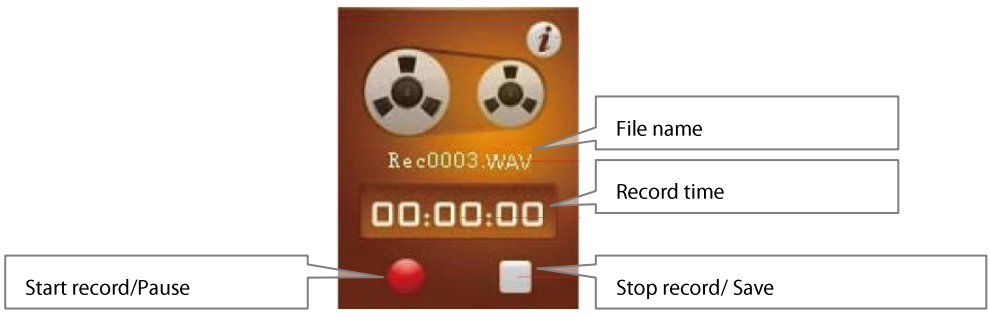

3.5 Photo

3.6 Text

4. Operation

4.1 Main menu

In the main menu, there are 8 functional icons, including: "Music", "Video", "Photo", "Radio", "Text", "Record", "Explorer" and "Settings". Click on corresponding functional icon to be able to access the function menu. Press the icon to be able to fold or expand all function icon. The main interface is separated into 2 screens. *Touch* ⇦ or ⇨ to switch between the different screens. Press the „Back" button to return to the main menu.

4.2 Music

In the main menu, select the option of "**Music**". in the menu „***Media Librabry***" you can **filter by different categories:** „***All music***", Artist", „***Album***", „***Genre***", „Directory list", Records" und „Update media Lib".

Functional icons:

- ⊕ / ⊖: Adjust volume
- ▶/ ⏸: Play/ Pause
- ⏮ **Short press:** Play previous song
  Long **Press:** Fast rewind
- ⏭: Short **Press:** Play next song
  Long press**:** Fast forward
- ⓘ: Music settings

Music settings

In music playing interface, touch "ⓘ" to open the music setup menu. You can make the following settings:

- **Playing mode**
  Normal: The titles are played in the prescribed order.
  Repeat all: Repeats all titles.
  Folder once: Plays all files in the folder once and stops.
  Folder repeat: All songs of the selected folder will be played back repeatedly.
  Repeat one: The selected song will be played back repeatedly.
- **Shuffle Mode:** Plays all files in random order.
- **Equalizer:** Select from 7 Equalizer modes.
- **MS Play FX Set:**
  - ***"3D Head Phone"***
  - ***„Pure Bass"***

Note:

Lyrics

When there is any lyric file with the same name in the folder for playing music, the player will directly access the lyric display interface. This player supports ".Lrc" lyric files (The user can download it from the website of "http://www.51lrc.com", or search "LRC Lyric" to have the lyric file) for the synchronous playing of lyrics and music.*

4.3 Photo

In the main menu, select the option of "***Photo***". *Touch " ⇦ " or " ⇨ " icon to switch between the different folders and files file.*

Fuctional icons:

- ▶ Auto play
- ⇦ Show previous picture
- ⇨ Show next picture

4.4 Radio

Functional icons

⊕/⊖ Adjust volume
</> Adjust frequency
ⓘ Settings

Set radio stations

In FM interface, click on "ⓘ"to be able to access to FM interface menu.

Search Mode: Manual and automatic channel search

FM Region: Set FM region

Save Station: Save the radio channels manually searched.

Delete Station: Delete the radio channels in the radio channel list

Note
While listening to FM radio, please insert the earphone used as the antenna.

4.5 Text

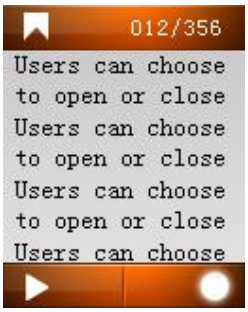

Fuctional icons

▸ Auto play
Set bookmarks

- Touch the top of the screen to switch over to the previous page
- Touch the bottom of the screen to switch over to the next page
- Touch the center of the screen to display or to hide the functional icons

Text settings

- Press the ⓘ icon to open the text settings. You can make the following settings:
- **Auto time:** When the text auto-browsing feature is active, you can choose the automatic switching time**.**
- **Add bookmark:** Sets a bookmark for the currently displayed page
- **Load bookmark**: List with any bookmarks which hab been added for the currently opened text.
- **Delete bookmark**

4.6 Record

Functional icons

- Start or pause recording
- Stop the current record and save it

4.7 Explorer

In the main menu, select the option of **" Explorer "** icon to be able to access explorer folder. Press " ⇦ " or " ⇨ " to switch between the different screens. **Select a folder to view the files in the folder**. Select **"Enter"** to open the file, select **"delete"** to delete the file. Short press the " **Return** " key to return to main interface.

4.8 Settings

Here you can change the following **settings:**

Functional icons

System Information: . Displays the information on the capacity, the available capacity, model and firmware version of the MP3 player.

Music: see also 4.2

Sprache: Under this menu you can select your favourite language.

Auto off: This option allows the users to set the automatic shutdown time. Whether the player was used or not within the specified time it will automatically shut down to save battery power consumption.

Sleep timer

Backlight: Set how long it should take until the backround lightning turns off.

Brightness: The player offers 1-5 different screen brightness levels to adjust brightness.

Default set: Reset the device to its factory settings

Note: When formatting your MP3 player no data will be deleted

4.9 Video

Functional icons:

- ▶ Play/ Pause

⏮ / ⏭ Previous/Next Video

⊕ / ⊖ Adjust volume

- Touch the center of the screen to display or to hide the functional icons.

5. Common troubleshooting

5.1 The device will not power on

Please check the battery status. If the battery is flat, recharge the battery and turn the player on again. If the device is not reacting, then please then please carry out a reset.

5.2 No sound

Check whether the voice is set to "0". If so, please control it to your favorite position. Check whether there is any playing source on the product. If there is no playing source on the product there will be no output of sound.

5.3 Noise in playing

The damaged music files may utter noise or discontinued sound output. Check whether the earphones are connected. Impurity in the jack / terminal inside the earphone might lead to disturbing noises.

5.4 Unable to download files

Make sure that the computer and the player are properly connected.

Make sure that the memory space of the memory is not full.

Make sure that the USB connection lines are not damaged.

5.5 A video file cannot be played

Please convert video files with the supplied Software into a playable format.

TrekStor®
Enjoy now.

EC DECLARATION OF CONFORMITY

As manufacturer and importer respectively:

TrekStor GmbH
Kastanienallee 8 - 10
D-64653 Lorsch, Germany

herewith declares that the products

Product: **i.Beat sense 1.8"**

Type: **MP3-Player**

comply with the following directive(s):

- **2004/108/EC** EMC Directive: Electromagnetic Compatibility
- **2006/95/EC** Low Voltage Directive

The following norms were consulted to assess conformity:

- **EN 55013:2001/A2:2006**
  Sound and television broadcast receivers and associated equipment – Radio disturbance characteristics – Limits and methods of measurement
- **EN 55020:2007**
  Sound and television broadcast receivers and associated equipment – Immunity characteristics – Limits and methods of measurement
- **EN 60065:2002 /A2:2010**
  Audio, video and similar electronic apparatus – Safety requirements

The CE symbol confirms that this product conforms with the above mentioned norms and regulations.

The manufacturer also declares the conformity of the product according to the following directives:

- **2001/95/EC** General Product Safety
- **2002/95/EC** RoHS: Hazardous substances in electrical and electronic equipment

T. Koroscha

Lorsch, **05.09.2011**

Thorsten Koroscha, LPM

Akku-Entsorgung

Informationspflicht gemäß Batterieverordnung (BattV)

Batterien und Akkus gehören nicht in den Hausmüll. Der Verbraucher ist dazu verpflichtet, nicht mehr verwendete Batterien und Akkus ordnungsgemäß zurückzugeben. Lassen Sie diese bitte nur über den Fachhandel oder durch Batteriesammelstellen entsorgen. Hier leisten Sie einen konkreten Beitrag zum Umweltschutz.

Seit 1998 verpflichtet die Deutsche Batterieverordnung alle Bürgerinnen und Bürger, verbrauchte Batterien und Akkus ausschließlich über den Handel oder speziell dafür eingerichtete Sammelstellen zu entsorgen (gesetzliche Rückgabepflicht).

Handel und Hersteller sind verpflichtet, diese Batterien und Akkus unentgeltlich zurückzunehmen und ordnungsgemäß zu verwerten oder als Sondermüll zu beseitigen (gesetzliche Rücknahmepflicht).

Akku ausbauen

Hinweis: *Bevor Sie Ihr ausgedientes Gerät zur Entsorgung geben, muss der Akku aus dem Gerät entfernt werden.*

Battery disposal

Reporting requirement according to the Battery directive (BattV)

Batteries are not part of the domestic waste. The consumer is obliged to return no longer used batteries properly. Please dispose of them by a specialized trade or a battery collection point. Hereby you make an important contribution to environmental protection. Since 1998 the German Battery Directive compels all citizens to dispose of used batteries exclusively through the trader or specially equipped departments (legal return obligation).

Trade and manufacturers are committed to take back batteries for free and to exploit it properly or to remove it as special waste (legal take-back obligation).

Remove battery

Note: *Before you return a disused device for disposal, the battery has to be removed from the device.*

Supportinformationen

Sollten Sie Fragen zu Ihrem TrekStor Produkt haben, gehen Sie bitte wie folgt vor:

- Überprüfen Sie anhand der Produkteigenschaften und der Funktionen Ihres Gerätes (auf der Verpackung ersichtlich), ob Sie die richtigen Einstellungen vorgenommen haben.
- Lesen Sie aufmerksam die gesamte Bedienungsanleitung.
- Informieren Sie sich auf unserer Website **www.trekstor.de** über aktuelle Informationen zu Ihrem Produkt (z. B. neu verfügbare Firmware-Updates).

Wenn Sie weitergehende Fragen zu Ihrem Produkt haben, beachten Sie bitte die folgenden TrekStor Supportoptionen:

FAQ

Der FAQ-Bereich unserer Website bietet Ihnen vielfältige Problemlösungshinweise. Hier erhalten Sie Antworten zu den am häufigsten gestellten Fragen zu unseren Produkten.

E-Mail

Füllen Sie das Supportformular auf unserer Website aus oder senden Sie eine E-Mail an **support.de@trekstor.de**.

Telefonsupport

Von Deutschland aus wählen Sie bitte **01805-TREKSTOR**

* 01805-87357867

* Die Nummer der Supporthotline für andere Länder finden Sie auf unserer Website unter "SERVICE".

* 14 Cent/Min. aus dem deutschen Festnetz der DTAG, max. 42 Cent/Min. aus Mobilfunknetzen.

Support information

If you have any questions regarding your TrekStor product, please proceed as follows:

- Check the features as well as the functions of your device (apparent on the packaging), in order to use the correct settings.
- Read the manual carefully.
- Informyourself of our website **www.trekstor.de/en** about the up-to-date information concerning your product (e. g. available most recent firmware releases).

In the case you have further questions regarding your product, please note the following TrekStor support options:

FAQ

The FAQ area of our website offers you a wide range of problem solving hints. Here you can obtain answers to the most frequently asked questions concerning our products.

E-Mail

Please fill in the support form on our website or send an E-Mail to **support.en@trekstor.de**. You can find mailing addresses for other countries when you click "SERVICE" at the menu bar on our website.

Phone support

Please find the number of the support hotline for your country on our website under "SERVICE" as well.